

Fuse

Fuse



HRT16

Fuse Link Type	00C,00,1,2,3
In	2-630A

Name	Suitable Fuse Bases	Rated Current In (A)
HRT16	00	2
	↓	↓
	00:HRT16-00	2: 2A
	1:HRT16-1	4: 4A
	2:HRT16-2	...
	2:HRT16-3	630:630A



HRT16 Base

Base Type	00,1,2,3
In	160,250,400,630

Name	Base type	Material
HRT16	00	ZS
	↓	↓
	00:HRT16-00C, HRT16-00	ZS: Resin base
	1:HRT16-1	
	2:HRT16-2	
	2:HRT16-3	

Fuse

Fuse



HRT18

Cylindrical Fuse Type	32,63
In	2-63A
Size	10×38,14×51



HRT18 Fuse Holder

Holder Type	32X,32,63X,63
Pole	1-3P
In	32,63
Material	Resin with Indicator Resin without Indicator Nylon with Indicator Nylon without Indicator

Name	Suitable Fuse Bases	Rated Current In (A)
HRT18	1038	2
	↓	↓
	1038: 10*38	2: 2A
	1451: 14*51	...
		63: 63A