



SCREWED DIAPHRAGM ACCUMULATORS type AM

5.1



FORGED DIAPHRAGM ACCUMULATORS type AML

5.2



WELDED DIAPHRAGM ACCUMULATORS type AMS

5.3



## 5.1.1 TECHNICAL DATA

**MAX OPERATING PRESSURE (PS):** (carbon steel) 210 - 330 bar  
(stainless steel) 150 ÷ 210 bar

**PRESSURE TEST (PT):** 1,43 x PS

**NOMINAL CAPACITIES:** 0,05 - 0,1 - 0,35 - 0,5 - 0,75 - 1,5 - 2,5 litres

**WORKING TEMPERATURE:** -40 ÷ +150 °C

**COMPRESSION RATIO (Po : P2):** max 1 : 6

**FLUID VISCOSITY RANGE:** 10 ÷ 400 cSt

**RECOMMENDED VISCOSITY:** 36 cSt

**FLUID CONTAMINATION DEGREE:**  
class 21/19/16 according to ISO 4406/99

**BODY MATERIAL:**

- carbon steel shell on painted with a black coat of rust inhibitor
- nickel coating 25 - 40 µ
- stainless steel AISI 316L
- duplex stainless steel SAF 2205

**FILLING VALVE MATERIAL:**

- galvanized carbon steel in compliance with Directive 2002/95/EC (RoHS) to resist to corrosion
- stainless steel AISI 316L

**DIAPHRAGM MATERIAL:**

- P = Nitrile rubber (NBR)
- F = Low temp. nitrile rubber
- K = Hydrogenated nitrile (HNBR)
- B = Butyl (IIR)
- E = Ethylene-propylene (EPDM)
- Y = Epichlorohydrin (ECO)
- V = Fluorocarbon (FKM)

See Table 5.1c and/or Chapter 1.5.

**FILLING VALVE CONNECTION:** - 5/8" UNF

**FLUID PORT CONNECTION:**


- M18 x 1,5
- 1/2" - 3/4" BSP ISO228
- 1/2" - 3/4" NPT-F

**FLOW RATE:** see table 5.1e

**WEIGHT:** see table 5.1e


## 5.1.2 "AM" DIAPHRAGM ADVANTAGES

- dirt tolerant
- light weight
- compact
- simple construction
- quick response
- works well on water, low lubricity fluids
- quick, easy installation
- low cost

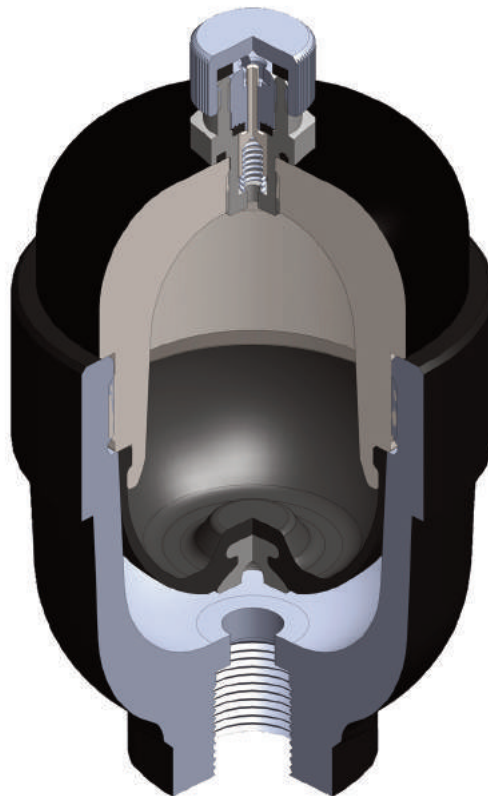

5.1a

## 5.1.3 HYDRAULIC SYMBOL

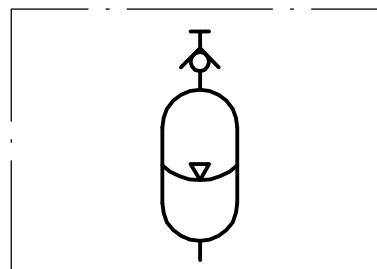

5.1b

## 5.1.4 DESCRIPTION

Diaphragm accumulators type "AM" are pressure vessels composed of a spherical or spherical-cylindrical shaped body in 2 or 3 pieces depending on its capacity. The separator of the diaphragm accumulators comprises an elastic diaphragm.

At the centre of the diaphragm, there is a metal disk, which serves to prevent the extrusion from the oil side in the event of complete discharge of the accumulator. The separator of the accumulators type "AM" can be replaced by removing the hemispherical caps.

The diaphragm has no friction. Therefore, there is no pressure drop between the oil and gas side. The diaphragm also has a low mass inertia. Diaphragm accumulators are then preferably used as shock absorbers and pulsation dampeners in the following sectors: industrial, machine tools, furniture and agriculture.

Accumulators type "AM" have a recommended compression ratio of 1:6, which, depending on the number of cycles of the loading and unloading time can also be of 1:8 without compromising the life of the diaphragm. Losses by diffusion of diaphragm accumulators are 1 ÷ 3% per year, de-

pending on the application characteristics.

The diaphragm may be made of different materials, so making the accumulators also suitable for corrosive liquids under pressure.

Compared to other accumulator types, the diaphragm ones have the hi-

ghest energy density (energy content / mass). This feature is due to the spherical shape of the accumulator shell.

For the diaphragm accumulators, you can choose any type of installation.

The preferred assembly is, however, the vertical one.

### 5.1.5 DIAPHRAGM - TEMPERATURE - LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, diaphragm material and the permissive temperature range.

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
P	Standard nitrile (Perburan)	NBR	-15 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
F	Low temperature nitrile	NBR	-40 ÷ +70	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
K	Hydrogenated nitrile	HNBR	-30 ÷ +130	The same as with standard nitrile but with excellent performance at high and low temperatures.
B	Butyl	IIR	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, resistance to ozone, aging and weathering.
E	Ethylene-Propylene	EPDM	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many organic and inorganic acids, detergents, solutions of sodium and potassium, phosphate ester-based hydraulic fluids, (HFD-R), silicone oils and greases, many polar solvents (alcohol, ketones, esters), Skydrol LD4 and 500B-4, resistance to ozone, aging and weathering.
Y	Epichloridrin	ECO	-30 ÷ +110	Mineral oils and greases, aliphatic hydrocarbons (propane, butane and gasoline), silicone oils and greases, water at room temperature, resistance to ozone, aging and weathering.
V	Fluorocarbon	FKM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.

For other hydraulic fluid and/or temperatures, please consult us.

5.1c

## 5.1.6 ORDER CODE

1	2	3	4	5	6	7	8	9	10
<b>AM</b>	<b>0,5</b>	<b>P</b>	<b>210</b>	<b>C</b>	<b>G</b>	<b>4</b>	<b>V</b>	<b>-</b>	<b>0 / 30</b>

**1 Series**

Diaphragm accumulator = **AM**

**2 Nominal capacity**

0,05 lt = **0,05**  
0,1 lt = **0,1**  
0,35 lt = **0,35**  
0,5 lt = **0,5**  
0,75 lt = **0,75**  
1,5 lt = **1,5**  
2,5 lt = **2,5**

**3 Diaphragm material**

Nitrile rubber (NBR) = **P**  
Nitrile for low temp. = **F**  
Hydrogenated nitrile (HNBR) = **K**  
Butyl (IIR) = **B**  
Ethylene-propylene (EPDM) = **E**  
Epichlorohydrin (ECO) = **Y**  
Fluorocarbon (FKM) = **V**

**4 Max working pressure (PS)**

Capacity litres	Carbon steel	Stainless steel
0,05 =	<b>210</b>	<b>150 – 210</b>
0,1 =	<b>210 - 330</b>	<b>150 – 210</b>
0,35 =	<b>210 - 330</b>	<b>150 – 210</b>
0,5 =	<b>210 - 330</b>	<b>150 – 210</b>
0,75 =	<b>210</b>	<b>150 – 210</b>
1,5 =	<b>210</b>	<b>150 – 210</b>
2,5 =	<b>210</b>	<b>150 – 210</b>

**10 Precharge pressure (bar)**

Standard 30 bar = **0 ÷ 280** (< PS)

**9 Test and certification**

Factory testing = **0**  
PED 2014/68/EU (for capacity 1,5-2,5 l) = **8**  
EAC Passport (Russia) = **11**  
Algeria passport = **12**  
Standard regulation (NR13) (Brazil) = **13**  
Tunisian passport = **14**

**8 Gas side connection**

Standard filling valve with 5/8" UNF tread = **V**  
Standard filling valve with 5/8" UNF tread in stainless steel = **VX**

**7 Dimension of connection side**

For the type of connection:  
M = (Diameter/Pitch) **18/1,5**  
G (for capacity 0,05 ÷ 0,35 l) 1/2" = **4**  
G (for capacity 0,5 ÷ 2,5 l) 1/2" = **4**  
3/4" = **5**  
A (for capacity 0,5 ÷ 2,5 l) 3/4" = **5**  
P (for capacity 0,05 ÷ 0,35 l) 1/2" = **4**  
P (for capacity 0,5 ÷ 2,5 l) 1/2" = **4**  
3/4" = **5**

**6 Fluid port connection**


Metric = **M**  
BSP ISO 228 = **G**  
BSP ISO 228 with chamfer for OR = **A**  
NPT-F (standard for stainless steel) = **P**

**5 Body material**

Carbon steel = **C**  
Carbon steel nickel coated 25 µ = **N**  
Carbon steel nickel coated 40 µ = **M**  
Stainless steel (150 bar) = **X**  
Duplex stainless steel (210 bar) = **D**

Special variants upon request

## 5.1.7 DIMENSIONS

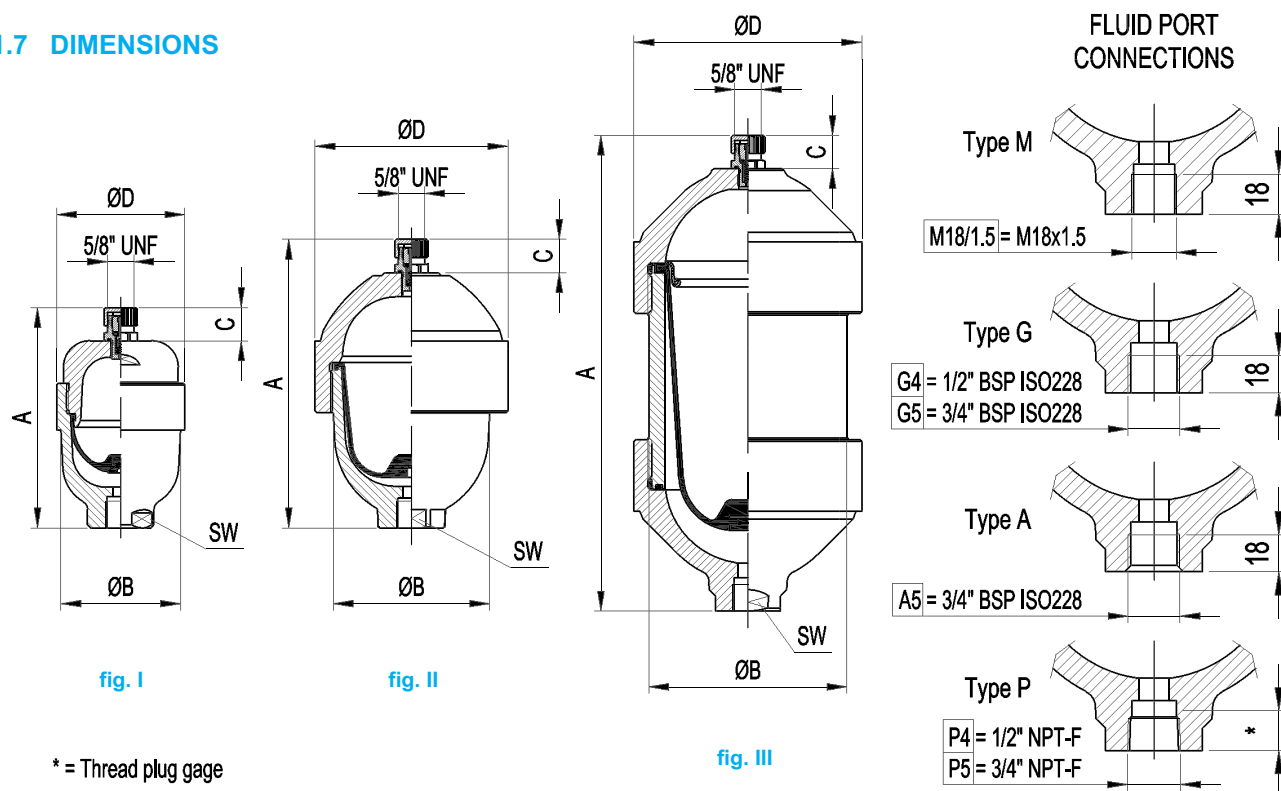

5.1d

Accumulator type AM	Fig.	Nominal gas volume litres	Real gas volume litres	Working pressure bar	PED category for the liquids of group 2	Maximum differential pressure * bar	Flow rate ** l/min	Maximum compression ratio Po/P2	A mm	Ø B mm	C mm	Ø D mm	SW mm	Dry weight Kg
AM 0,05	I	0,05	0,05	150 210	Art.3 (3)	110	10	1 : 6	108	65	20	65	41	1,3
AM 0,1	I	0,1	0,1	150 210 330	Art.3 (3)	110	10	1 : 6	130	73	20	77	36	1,6
AM 0,35	I	0,35	0,32	150 210 330	Art.3 (3)	110	40	1 : 6	160	94	20	99	36	2,6
AM 0,5	II	0,5	0,48	150 210 330	Art.3 (3)	110	40	1 : 6	175	94	20	116	36	3,6
AM 0,75	II	0,75	0,72	150 210	Art.3 (3)	110	40	1 : 6	190	115	20	137	41	5,6
AM 1,5	III	1,5	1,4	150 210	II	110	50	1 : 6	290	120	20	137	41	9,4
AM 2,5	III	2,5	2,4	150 210	II	110	60	1 : 6	445	120	20	137	41	13,2

\* The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles).

\*\* Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and ΔP = 5 bar

5.1e

## 5.1.8 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subjected to the national regulations and directives, valid at the place of installation. Diaphragm accumulators type AM, up to and including 1 litre, must not be CE marked.

For diaphragm accumulators type AM, greater than 1 litre, every shipping batch is provided with a conformity declaration a use and maintenance instructions and/or all the documents requested.

All vessel categories (see Table 5.1e) must be protected by means of a pressure relief valve in accordance with Directive 2014/68/EU.

## 5.1.9 SPARE PARTS CODE

Item	Description	AM 0,05	AM 0,1	AM 0,35	AM 0,5	AM 0,75	AM 1,5	AM 2,5
1	P	MM0,05-P	MM0,1-P	MM0,35-P	MM0,5-P	MM0,75-P	MM1,5-P	MM2,5-P
	F	MM0,05-F	MM0,1-F	MM0,35-F	MM0,5-F	MM0,75-F	MM1,5-F	MM2,5-F
	K	MM0,05-K	MM0,1-K	MM0,35-K	MM0,5-K	MM0,75-K	MM1,5-K	MM2,5-K
	Diaphragm B	MM0,05-B	MM0,1-B	MM0,35-B	MM0,5-B	MM0,75-B	MM1,5-B	MM2,5-B
	E	MM0,05-E	MM0,1-E	MM0,35-E	MM0,5-E	MM0,75-E	MM1,5-E	MM2,5-E
	Y	MM0,05-Y	MM0,1-Y	MM0,35-Y	MM0,5-Y	MM0,75-Y	MM1,5-Y	MM2,5-Y
	V	MM0,05-V	MM0,1-V	MM0,35-V	MM0,5-V	MM0,75-V	MM1,5-V	MM2,5-V
2	Gas valve V	V2072-CP	V2072-CP	V2072-CP	V2072-CP	V2072-CP	V2072-CP	V2072-CP
	VX	V2072-XP	V2072-XP	V2072-XP	V2072-XP	V2072-XP	V2072-XP	V2072-XP
3	P						KG2087-P	KG2087-P
	F						KG2087-F	KG2087-F
	K						KG2087-K	KG2087-K
	Seal kit B						KG2087-B	KG2087-B
	E						KG2087-E	KG2087-E
	Y						KG2087-Y	KG2087-Y
	V						KG2087-V	KG2087-V

5.1f

## 5.1.10 ACCESSORIES

For clamps see section 7

For safety blocks see section 9

For pre-loading and charging set see section 11

For pulse damper adapters see section 12.1

## 5.1.11 COMMISSIONING AND MAINTENANCE

### Delivery condition

Diaphragm accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order.

The preload value is still on the nameplate of the accumulator.

Depending on the size and quantity ordered, the diaphragm accumulators are shipped in boxes or in cartons or on pallets, or wooden boxes on request.

Unless otherwise required certificates and documentation are provided together with the accumulators.

### Handling

The original packaging is suitable for handling and general storage.

Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

Protect from impact, however, the packaging and handle it with care.

### Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

### Marking on the nameplate of the accumulator

With reference to the PED 2014/68/EU classification, Article 3, Paragraph 3 and / or risk categories I or II according to the amount and maximum working pressure, the accumulator indicates the following

- logo, name and country of the manufacturer
- product code
- Month / year of production
- Serial number
- Maximum PS pressure and PT test pressure in bar
- Min. and max. TS working temperature in Celsius
- Volume V in litres
- Group of fluids allowed (II)
- CE marking (by volume exceeding 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

### It is strictly forbidden to:

- weld, rivet or screw any item of the accumulator
- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

### Installation

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling.

Verify that the requested type matches with what stamped on the nameplate. The accumulator can be mounted in any position.

We recommend using the accumulator with a suitable safety valve (see section 8) or with a safety blocks type BS (see section 9).

This device provides user and equipment protection against possible damage caused by pressure surges, and also makes the maintenance of the accumulator easier, so facilitating the interception and the discharge.



Provide for a clearance of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see Chap.11). The accumulators type AM may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see section 7) to avoid the transmission of vibrations.

In the absence of the use of safety EPE blocks, make sure that the accumulator is connected to the hydraulic circuit through appropriate connecting devices.

Make sure the fluid is compatible with the elastomer of the diaphragm. Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

### Pre-charge of nitrogen

Normally, the diaphragm accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit. For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a cylinder equipped with a pressure reducing valve (see Chap.11.3). Use the EPE pre-loading and charging set type PC to check the charging pressure Calculated Against the pressure, and adjust if necessary.

If the pre-charge pressure is lower than required, connect the inflation tube on one side and the other of the equipment. Connect it to the cylinder of nitrogen or to the pressure reducer.

Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than that set (+ 10 ÷ 15%).

Close the cylinder and remove the connecting pipe from the equipment; wait until the gas temperature has stabilized (1 hour) and calibrate the pressure, discharging the excess gas.

Make sure that the gas pipe is not subject to losses and, if necessary, use soap and water.

Tighten the protective cap manually.

### Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application
- Ensure that the hydraulic pressure never exceeds the max. (PS) allowed and shown on the accumulator shell.

To avoid this risk, use a safety item (see section 9).

### Maintenance

- Periodically check the pre-charge pressure of the gas: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test at annual intervals.

For heavy-duty applications, check the pre-charge every 6 months.

- Periodically (annually) carry out a visual inspection of the accumulator in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the accumulator.

### Disassembly

If for failure, scheduled check or retest it is necessary to remove the accumulator from the system, prior to removal, isolate the accumulator from the installation and discharge pressure of the liquid.

All diaphragm EPE accumulators of the AM series may be repaired.

- Fix the bottom in a vice.
  - Remove the pre-charge valve (after having discharged completely the nitrogen).
  - Unscrew the top cap with a strap wrench or a spanner.
- Remove the diaphragm and any seal.

### Repair

It may consist in replacing the diaphragm, seals (if any) or pre-charging valve 5/8"UNF.

For reasons of functionality and security, it is recommended to use only original spare parts.

Before starting the repair, drain completely the nitrogen contained in the accumulator.

### Refitting

After thorough cleaning, check and replace the damaged components. The exterior of the diaphragm and any seal must be wetted with the working liquid.

Replace the cover and tighten it firmly.

Finally, replace the pre-charge valve with a tightening torque of 35 Nm.

### Pre-charge

- Screw the pre-charge PC equipment on the gas valve.
- Connect the equipment to the cylinder of nitrogen or to the pressure reducer with the inflation tube.
- Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the cylinder and remove the connecting pipe from the equipment.
- Wait until the gas temperature has stabilized (2 hours).
- Calibrate the pressure discharging the excess gas.

### Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve.

If you need, proceed decontaminating in relation to the fluid used prior to demolition.

Reproduction Is Forbidden.

In The Spirit Of Continuous Improvement, Our Products May Be Changed.



## 5.2.1 TECHNICAL DATA

**MAX OPERATING PRESSURE (PS):** (carbon steel) 250 - 350 bar  
(stainless steel) 150 ÷ 210 bar

**PRESSURE TEST (PT):** 1,43 x PS

**NOMINAL CAPACITIES:** 0.8 - 1.5 litres

**WORKING TEMPERATURE:** -40 ÷ +150 °C

**COMPRESSION RATIO (Po : P2):** max 1 : 6

**FLUID VISCOSITY RANGE:** 10 ÷ 400 cSt

**RECOMMENDED VISCOSITY:** 36 cSt

**FLUID CONTAMINATION DEGREE:**  
class 21/19/16 according to ISO 4406/99

**BODY MATERIAL:**

- carbon steel shell on painted with a black coat of rust inhibitor
- nickel coating 25 - 40 µ
- stainless steel AISI 316L
- duplex stainless steel SAF 2205

**FILLING VALVE MATERIAL:**

- galvanized carbon steel in compliance with Directive 2002/95/EC (RoHS) to resist to corrosion
- stainless steel AISI 316L

**DIAPHRAGM MATERIAL:**

- P = Nitrile rubber (NBR)
- F = Low temp. nitrile rubber
- K = Hydrogenated nitrile (HNBR)
- B = Butyl (IIR)
- E = Ethylene-propylene (EPDM)
- Y = Epichlorohydrin (ECO)
- V = Fluorocarbon (FKM)

See Table 5.2c and /or Chapter 1.5

**FILLING VALVE CONNECTION:** 5/8" UNF

**FLUID PORT CONNECTION:**

- M18 x 1,5
- 1/2" - 3/4" BSP ISO228
- 1/2" - 3/4" NPT-F

**FLOW RATE:** see table 5.2d

**WEIGHT:** see table 5.2d


## 5.2.2 "AML" DIAPHRAGM ADVANTAGES

- dirt tolerant
- light weight
- compact
- simple construction
- quick response
- works well on water, low lubricity fluids
- quick, easy installation
- low cost



5.2a

## 5.2.3 HYDRAULIC SYMBOL

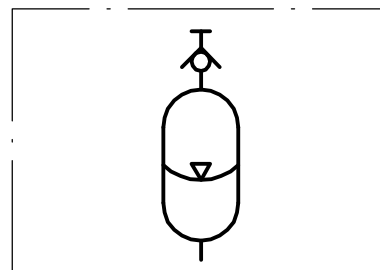

5.2b

## 5.2.4 DESCRIPTION

Diaphragm accumulators type "AML" are pressure vessels composed of a forged shell, whose ends have a semi-spherical shape. The separator of the diaphragm accumulators comprises an elastic diaphragm. At the centre of the diaphragm, there is a metal disk, which serves to prevent the extrusion from the oil side in the event of complete discharge of the accumulator.

The separator of the accumulators type "AML" can be replaced by removing the ring nuts on the gas site.

The diaphragm has very low friction. Therefore, the pressure drop between the oil and gas side is irrelevant. The diaphragm also has a low mass inertia. Diaphragm accumulators are then preferably used as shock absorbers and pulsation dampeners in the following sectors: industrial, machine tools, furniture and agriculture.

Accumulators type "AML" have a recommended compression ratio of 1:6, which, depending on the number of cycles of the loading and unloading time can also be of 1:8 without compromising the life of the dia-

phragm. Losses by diffusion of diaphragm accumulators are  $1.5 \div 4\%$  per year, depending on the application characteristics.

The diaphragm may be made of different materials, so making the accu-

mulators also suitable for corrosive liquids under pressure.

For the diaphragm accumulators, you can choose any type of installation.

The preferred assembly is, however, the vertical one.

### 5.2.5 DIAPHRAGM - TEMPERATURE - LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, diaphragm material and the permissive temperature range.

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
P	Standard nitrile (Perburan)	NBR	$-20 \div +80$	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
F	Low temperature nitrile	NBR	$-40 \div +70$	The same as with standard nitrile + a number of different types of Freon. (This contains less acrylonitrile than the standard and is therefore more suitable for low temperatures, but its chemical resistance is slightly lower).
K	Hydrogenated nitrile	HNBR	$-30 \div +130$	The same as with standard nitrile but with excellent performance at high and low temperatures.
B	Butyl	IIR	$-30 \div +100$	Hot water up to $100^{\circ}\text{C}$ , glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, resistance to ozone, aging and weathering.
E	Ethylene-Propylene	EPDM	$-30 \div +100$	Hot water up to $100^{\circ}\text{C}$ , glycol-based brake fluids, many organic and inorganic acids, detergents, solutions of sodium and potassium, phosphate ester-based hydraulic fluids, (HFD-R), silicone oils and greases, many polar solvents (alcohol, ketones, esters), Skydrol LD4 and 500B-4, resistance to ozone, aging and weathering.
Y	Epichloridrin	ECO	$-30 \div +110$	Mineral oils and greases, aliphatic hydrocarbons (propane, butane and gasoline), silicone oils and greases, water at room temperature, resistance to ozone, aging and weathering.
V	Fluorocarbon	FKM	$-10 \div +150$	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.

5.2c

For other hydraulic fluid and/or temperatures, please consult us.

## 5.2.6 ORDER CODE

1	2	3	4	5	6	7	8	9	10		
AML	1,5	P	250	C	M	18/1,5	V	-	8	/	30

1

Series

Diaphragm accumulator = **AML**

2

Nominal capacity

0,8 lt = **0,8**  
1,5 lt = **1,5**

3

Diaphragm material

Nitrile rubber (NBR) = **P**  
Nitrile for low temp. = **F**  
Hydrogenated nitrile (HNBR) = **K**  
Butyl (IIR) = **B**  
Ethylene-propylene (EPDM) = **E**  
Epichlorohydrin (ECO) = **Y**  
Fluorocarbon (FKM) = **V**

4

Max working pressure (PS)

Capacity litres	Carbon steel	Stainless steel
0,8 =	<b>250 - 350</b>	<b>150 - 210</b>
1,5 =	<b>250 - 350</b>	<b>150 - 210</b>

5

Body material

Carbon steel = **C**  
Carbon steel nickel coated 25 µ = **N**  
Carbon steel nickel coated 40 µ = **M**  
Stainless steel (150 bar) = **X**  
Duplex stainless steel (210 bar) = **D**

6

Fluid port connection

Metric = **M**  
BSP ISO 228 = **G**  
BSP ISO 228 with chamfer for OR = **A**  
NPT-F (standard for stainless steel) = **P**

7

Dimension of connection side

For the type of connection:  
M = (Diameter/Pitch) **18/1,5**  
G 1/2" = **4**  
3/4" = **5**  
A 3/4" = **5**  
P 1/2" = **4**  
3/4" = **5**

8

Gas side connection

Standard filling valve with 5/8" UNF tread = **V**  
Standard filling valve with 5/8" UNF tread in stainless steel = **VX**

9

Test and certification

Factory testing = **0**  
PED 2014/68/EU (for capacity 1,5) = **8**  
EAC Passport (Russia) = **11**  
Algeria passport = **12**  
Standard regulation (NR13) (Brazil) = **13**  
Tunisian passport = **14**


10

Precharge pressure (bar)

Standard 30 bar = **0 ÷ 280** (< PS)

Special variants on request

## 5.2.7 DIMENSIONS

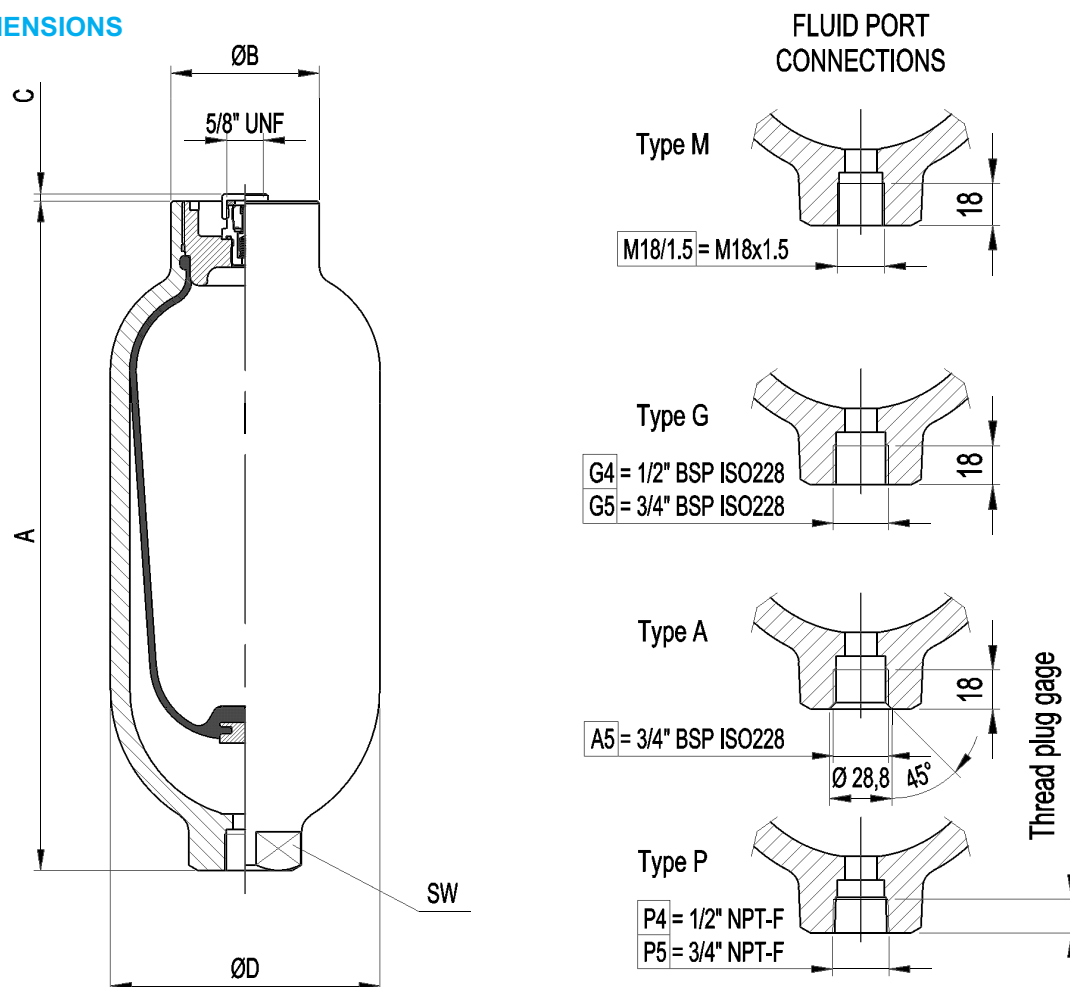

5.2d

Accumulator type AML	Nominal gas	Real gas volume	Working pressure	PED category for the liquids of group 2	Maximum differential pressure*	Flow rate **	Maximum compression ratio	A	Ø B	C	Ø D	SW	Dry weight
volume	litres	litres	bar		bar	l/min	Po/P2	mm	mm	mm	mm	mm	Kg
AML 0,8	0,8	0,8	150 210 250 350	Art.3 (3)	110	40	1 : 6	200	65	3	116	36	4,5
AML 1,5	1,5	1,5	150 210 250 350	II	110	40	1 : 6	295	65	3	116	36	5,6

- The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles).
- Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and  $\Delta P = 5$  bar

5.2e

## 5.2.8 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subjected to the national regulations and directives, valid at the place of installation. Diaphragm accumulators type AML, up to and including 1 litre, must not be CE marked.

For diaphragm accumulators type AML, greater than 1 litre, every shipping batch is provided with a conformity declaration, use and maintenance instructions and/or all the documents requested.

All vessel categories (see Table 5.1c) must be protected by means of a pressure relief valve in accordance with Directive 2014/68/EU.

## 5.2.9 SPARE PARTS CODE

Item	Description	AML 0,8	AML 1,5
1	P	<b>ML0,8-P</b>	<b>ML1,5-P</b>
	F	<b>ML0,8-F</b>	<b>ML1,5-F</b>
	K	<b>ML0,8-K</b>	<b>ML1,5-K</b>
	Diaphragm B	<b>ML0,8-B</b>	<b>ML1,5-B</b>
	E	<b>ML0,8-E</b>	<b>ML1,5-E</b>
	Y	<b>ML0,8-Y</b>	<b>ML1,5-Y</b>
	V	<b>ML0,8-V</b>	<b>ML1,5-V</b>
2	Gas valve V	<b>V2072-CP</b>	<b>V2072-CP</b>
	VX	<b>V2072-XP</b>	<b>V2072-XP</b>

5.2f

## 5.2.10 ACCESSORIES

For clamps see section 7

For safety blocks see section 9

For pre-loading and charging set see section 11

For pulse damper adapters see section 12.1

## 5.2.11 COMMISSIONING AND MAINTENANCE

### Delivery condition

Diaphragm accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order.

The pre-charge value is still on the nameplate of the accumulator.

Depending on the size and quantity ordered, the diaphragm accumulators are shipped in boxes, in cartons, on pallets or wooden boxes on request.

Unless required, certificates and documentation are provided together with the accumulators.

### Handling

The original packaging is suitable for handling and general storage.

Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

However protect from impact the packaging and handle it with care.

### Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

### Marking on the nameplate of the accumulator

With reference to the PED 2014/68/EU classification, Article 3, Paragraph 3 and / or risk categories I or II depending on the volume and maximum working pressure, the accumulator indicates the following data:

- Month / year of production
- logo, name and country of the manufacturer
- product code
- Serial number
- Maximum pressure PS and test pressure PT in bar
- Min. and max. working temperature TS in Celsius
- Volume V in litres
- Group of fluids allowed (II)

- CE marking (for volumes exceeding 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

### It is strictly forbidden to:

- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

### Installation

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling.

Verify that the requested type matches with what stamped on the nameplate.

We recommend using the accumulator with a suitable security valve (see section 8) or a security block type BS (see section 9). This device provides user and equipment protection against possible damage caused by pressure surges and also makes the maintenance of the accumulator easier, and facilitate the interception and the discharge.

Provide for a spare of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see section 11.2).

The accumulators type AML may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

Make sure the fluid is compatible with the elastomer of the diaphragm.

Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

### Pre-charge of nitrogen

Normally, the diaphragm accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit. For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a cylinder equipped with a pressure reducing valve (see section 11.3). Use the EPE pre-charge and charging set type PC to check the charging pressure required and adjust if necessary.

If the pre-charge pressure is lower than required, connect the charging nose to the pre-loading set on one side and the other side connect it to the nitrogen bottle or to the pressure reducer. Slowly free the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).

Close the bottle and remove the charging nose from the pre-loading set; wait until the gas temperature has stabilized (1 hour) and calibrate the pressure, discharging the excess gas. Make sure that the gas pipe is not subject to losses and, if necessary, use soap and water.

Tighten the protective cap manually.

### Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application
- Ensure that the hydraulic pressure never exceeds the max. allowed pressure (PS) and shown on the accumulator shell.

To avoid this risk, use a safety device (see Chap. 9).

### Maintenance

- Periodically check the pre-charge pressure of the gas: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test at yearly. For heavy duty applications, check the pre-charge every 6 months.
- Periodically (yearly) carry out a visual inspection of the accumulator in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the accumulator.

### Disassembly

If for failure, scheduled check or retest it is necessary to remove the accumulator from the system, prior to removal, isolate the accumulator from the installation and discharge pressure of the liquid.

All diaphragm EPE accumulators of the AML series may be repaired.

- Fix the bottom in a vice simply.
- Remove the pre-charge valve (after having discharged completely the nitrogen).
- Unscrew the upper internal nut ring with a suitable wrench.

Remove the diaphragm.

### Repair

It may consist in replacing the pre-charge valve of 5/8" UNF. For reasons of functionality and security, it is recommended to use only original spare parts. Before starting the repair, discharge completely the nitrogen contained in the accumulator.

### Reassembling

After thorough cleaning, check and replace the damaged components. The exterior of the diaphragm must be wetted with the working liquid.

Refit the nut ring and tighten it firmly.

Finally, refit the pre-charge valve with a tightening torque of 35 Nm.

### Pre-charge

- Screw the pre-charge PC equipment on the gas valve.
- Connect the equipment to the bottle of nitrogen or to the pressure reducer with the charging nose.
- Slowly fill the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the bottle and remove the charging nose from the equipment.
- Wait until the gas temperature has stabilized (2 hours).
- Calibrate the pressure discharging the excess gas.

### Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve.

If you need, proceed decontaminating in relation to the fluid used prior to demolition.

Reproduction Is Forbidden.

In The Spirit Of Continuous Improvement, Our Products May Be Changed.



## 5.3.1 TECHNICAL DATA

### MAX OPERATING PRESSURE (PS):

(carbon steel) 210 - 250 - 330 - 350 bar  
(stainless steel) 100 bar (other, upon request)

### PRESSURE TEST (PT): 1,43 x PS

### NOMINAL CAPACITIES: litres

0.075 - 0.16 - 0.25 - 0.32 - 0.5 - 0.75 - 1 - 1.4 - 2 - 2.8 - 3.5

### WORKING TEMPERATURE: -40 ÷ +80 °C

### COMPRESSION RATIO (Po : P2): max 1 : 8; see Tab.5.3e

### FLUID VISCOSITY RANGE: 10 ÷ 400 cSt

### RECOMMENDED VISCOSITY: 36 cSt

### FLUID CONTAMINATION DEGREE:

class 21/19/16 according to ISO 4406/99

### BODY MATERIAL:

- carbon steel shell painted with a black rust inhibitor coat RAL 5005
- stainless steel AISI 316L

### FILLING VALVE MATERIAL (internal screw):

- galvanized carbon steel in compliance with Directive 2002/95/CE (RoHS) to resist to corrosion
- stainless steel AISI 316L

### DIAPHRAGM MATERIAL:

- P = Nitrile rubber (NBR)
- Y = Epichlorohydrin (ECO)
- B = Butyl (IIR)
- V = Fluorocarbon (FKM)

See Table 5.3c and /or Chapter 1.5

### FILLING VALVE CONNECTION:

- M28 x 1.5
- without and closed

### FLUID PORT CONNECTION:

- internal thread:  
1/2" - 3/4" BSP ISO228
- external thread: M33x1.5

See Table 5.3e

### FLOW RATE: see Table 5.3e

### WEIGHT: see Table 5.3e


## 5.3.2 "AMS" DIAPHRAGM ADVANTAGES

- high compression ratio
- dirt tolerant
- light weight
- compact
- simple construction
- quick response
- permanently sealed for maintenance free operation
- works well on low lubricity fluids
- quick, easy installation and replacement
- can be mounted in any position
- long service life
- low cost



5.2a

## 5.3.3 HYDRAULIC SYMBOL

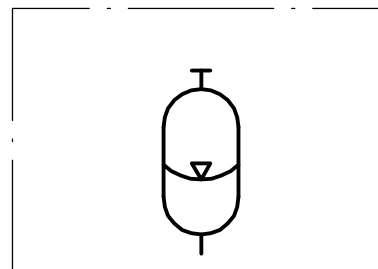

5.2b

## 5.3.4 DESCRIPTION

The welded type diaphragm accumulators cannot be repaired, as they are specially designed for high quantity and economical applications, where it is more practical to replace the unit rather than refurbishing it. These accumulators consist of a shell manufactured with a high strength alloy steel and a welded electron-beam. The flexible diaphragm provides excellent gas and fluid separation. Diaphragm are available in two compounds:

- "P" nitrile (NBR)
- "Y" hydrin (ECO)
- "B" = Butyl (IIR)
- "V" = Fluorocarbon (FKM)

The button closes the fluid port when the accumulator is fully discharged to prevent diaphragm extrusion.

The fluid port is available provided with two types of connections:

- "G" BSP UNI228 female
- "W" BSP UNI228 female and external metric male

The gas valve is available in two versions:

- "VT" fixed pre-charge
- "VM" metric M28x1.5 gas valve and leak-free. It offers flexibility of checking or charging the accumulator (see charging kit type PCM).



This rugged gas valve features an internal hexagonal locking screw with sealing washer.

Diaphragm accumulators type AMS are then preferably used as shock absorbers and pulsation dampeners in the following sectors: industrial, machine tools, furniture and agriculture.

Compared to other accumulator types, the diaphragm ones have the highest energy density (energy content / mass). This feature is due to the spherical shape of the accumulator shell.

For the diaphragm accumulators, you can choose any type of installation. The preferred assembly is, however, the vertical one.

### 5.3.5 DIAPHRAGM - TEMPERATURE - LIQUID COMPATIBILITY

When selecting the accumulator variant, pay attention to the following non-binding notes with regard to hydraulic fluid, diaphragm material and the permissive temperature range.

Code letter	Polymer	ISO	Temperature range (°C)	Some of the liquids compatible with the polymer
<b>P</b>	Standard nitrile (Perburan)	NBR	-10 ÷ +80	Aliphatic hydrocarbons (propane, butane, gasoline, oils, mineral greases, diesel fuel, fuel oil, kerosene), mineral greases and oils, HFA - HFB - HFC fluids, many dilute acids, alkalis, saline solutions, water, water glycol.
<b>Y</b>	Epichloridrin	ECO	-30 ÷ +110	Mineral oils and greases, aliphatic hydrocarbons (propane, butane and gasoline), silicone oils and greases, water at room temperature, resistance to ozone, aging and weathering.
<b>B</b>	Butyl	IIR	-30 ÷ +100	Hot water up to 100°C, glycol-based brake fluids, many acids and bases, salt solutions, polar solvents such as alcohols, ketones and esters, polyglycol-based hydraulic fluids (HFC fluids) and bases of esters of phosphoric acid (HFD-R fluids), silicone oils and greases, resistance to ozone, aging and weathering.
<b>V</b>	Fluorocarbon	FKM	-10 ÷ +150	Mineral oils and greases, non-flammable fluids of HFD group, silicone oils and greases, animal and vegetable oils and greases, aliphatic hydrocarbons (gasoline, butane, propane, natural gas), aromatics hydrocarbons (benzene, toluene), chlorinated hydrocarbons (Tetrachloroethylene, carbon tetrachloride), fuel (regular, super and containing methanol), excellent resistance to ozone, weathering and aging.

For other hydraulic fluid and/or temperatures, please consult us.

5.3c

### 5.3.6 ORDER CODE

1	2	3	4	5	6	7	8	9	10
AMS	1,4	P	210	C	W	4	VM	-	0 / 30

1	Series
	Diaphragm accumulator = AMS

2	Nominal capacity
0,075	It = <b>0,075</b>
0,16	It = <b>0,16</b>
0,32	It = <b>0,32</b>
0,5	It = <b>0,5</b>
0,75	It = <b>0,75</b>
1	It = <b>1</b>
1,4	It = <b>1,4</b>
2	It = <b>2</b>
2,8	It = <b>2,8</b>
3,5	It = <b>3,5</b>

3	Diaphragm material
	Gomma nitrilica (NBR) = <b>P</b>
	Epicloridrina (ECO) = <b>Y</b>
	Butyl (IIR) = <b>B</b>
	Fluorocarbon (FKM) = <b>V</b>

4 Max working pressure (PS)		
Capacity (litres)	Carbon steel (bar)	Stainless steel
0,075 =	250	100
0,16 =	250	100
0,32 =	210	100
0,5 =	210	100
0,75 =	150 - 210 - 330	100
1 =	210	100
1,4 =	210 - 350	100
2 =	100 - 210	100
2,8 =	210 - 350	100
3,5 =	250 - 350	-

10	<b>Precharge pressure (bar)</b>
Standard 30 bar = <b>0 ÷ 130</b> (max 130 bar)	

9	Test and certification
Factory testing	= 0
PED 2014/68/EU (for capacity 1,5-3,5 l)	= 8
EAC Passport (Russia)	= 11
Algeria passport	= 12
Standard regulation (NR13) (Brazil)	= 13
Tunisian passport	= 14

8	<b>Gas side connection</b>
Standard filling valve thread M28x1.5 = <b>VM</b>	
Without pre-charge valve with fixed pre-charge calibration = <b>VT</b>	

<b>7</b>	<b>Dimension of connection side</b>
For the type of connection:	
G (for capacity 0.075 ÷ 2,8 lt)	1/2" = 4
G (for capacity 3.5 lt)	3/4" = 5

6	<b>Fluid port connection</b>
BSP ISO 228 Female	= <b>G</b>
BSP ISO 228 Female and metric male M33x1.5	= <b>W</b>

5	Body material
	Carbon steel = <b>C</b>
	Stainless steel (100 bar) = <b>X</b>
	Carbon steel -40°C = <b>L</b>

Special variants on request

**Types normally available from stock:**

- AMS0.32P210CW4VM-0/30
- AMS0.5P210CW4VM-0/30
- AMS0.75P210CW4VM-0/30

## 5.3.7 DIMENSIONS

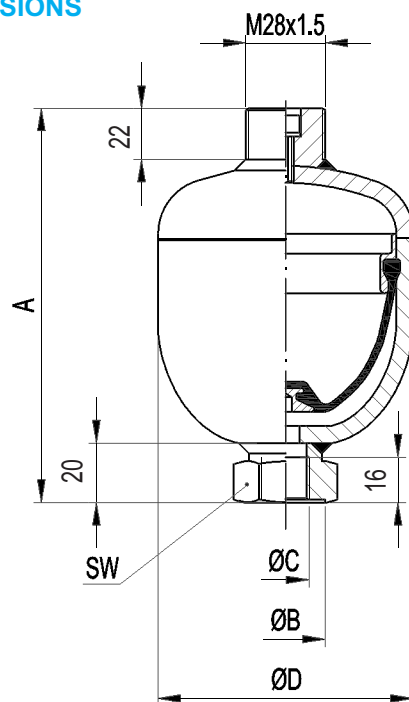


fig. I

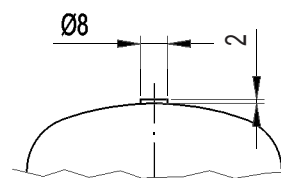


fig. III

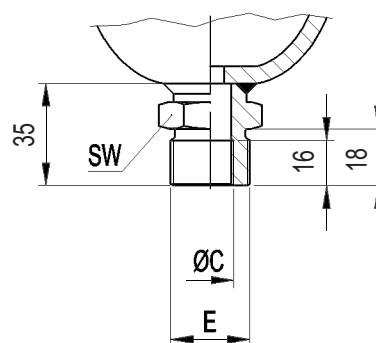


fig. II

5.3d

Accumulator type AMS	Fig.	Nominal gas value litres	Actual gas value litres	Working pressure bar	PED category for the liquids of group 2	Maximum differential pressure * bar	Flow rate ** l/min	Maximum compression ratio Po/P2	A mm	Ø B mm	Ø C mm	Ø D mm	E mm	SW mm	Dry weight Kg
AMS 0,075	I - II	0,075	0,075	250	Art.3 (3)	210	20	1 : 8	111	29	1/2"	64	-	32	0,7
AMS 0,16	I - II	0,16	0,16	250	Art.3 (3)	210	20	1 : 8	120	29	1/2"	75	M33x1,5	32	1
AMS 0,32	I - II	0,32	0,32	210	Art.3 (3)	140	40	1 : 8	138	29	1/2"	93	M33x1,5	32	1,4
AMS 0,5	I-II-III	0,5	0,5	210	Art.3 (3)	175	50	1 : 8	152	34	1/2"	105	M33x1,5	41	2
AMS 0.75	I-II-III I-II-III I-II-III	0.75	0.75	150 210 330	Art.3 (3)	120 175 150	50	1 : 8	161 162 169	34	1/2"	115 118 121	M33x1.5	41	2.6 2.6 4.4
AMS 1	I-II-III	1	1	210	Art.3 (3)	170	50	1 : 8	180	34	1/2"	130	M33x1.5	41	3.5
AMS 1.4	I-II-III	1.4	1.4	140 250 350	I II II	100 120 150	50	1 : 8	199 202 197	34	1/2"	148 157 160	M33x1.5	41	4.2 5.4 7.4
AMS 2	I-II-III I-II-III I-II I-II	2	2	100 210 250 350	I II II II	80 120 140 200	50 50 70 70	1 : 8	213 249 253 219	34	1/2" 1/2" 3/4" 3/4"	163 155 157 180	M33x1.5 M33x1.5 - -	41 41 41 55	3.5 4.2 7.5 11.3
AMS 2.8	I-II-III I-II I-II-III	2.8	2.8	210 250 350	II	100 140 200	50 70 70	1 : 4	269 273 279	34	1/2" 3/4" 3/4"	166,5 170,5 180	M33x1.5 - M45x1.5	41 41 55	8.2 10 14.3
AMS 3.5	I-II I-II-III	3.5	3.5	250 350	II III	140 200	70	1 : 4	300 385,5	34	3/4"	174 180	- M45x1.5	41 55	11.5 16

- The maximum differential pressure is the maximum allowable difference between the maximum pressure and the minimum working pressure (P2-P1) to have an infinite life cycle of the accumulator (greater than 2,000,000 cycles).

5.3e

- Flow rate measured using mineral oil with viscosity of 36 cSt at 50°C and  $\Delta P = 5$  bar

## 5.3.8 EUROPE MARKET

All hydraulic accumulators are pressure vessels and are subject to the national regulations and directives, valid at the place of installation. Diaphragm accumulator type AMS, up to and including 1 litre, must not be CE marked.

For diaphragm accumulator type AMS, greater than 1 litre, every shipping batch is provided with a conformity declaration and use and maintenance instructions and/or all documents requested.

All vessel categories (see Table 5.3e) must be protected by means of a pressure relief valve in accordance with Directive 2014/68/EU.

## 5.3.9 SPARE PARTS CODE

Item	Description	AMS 0.075 ÷ 2,8
1	Gas valve VM	V2220-CP

5.2f

## 5.3.10 ACCESSORIES

For clamps, see Cap.7

For pre-loading and charging set, see Cap.11.2

For pulse damper adapters, see Cap.12.1

## 5.3.11 COMMISSIONING AND MAINTENANCE

### Delivery condition

Diaphragm accumulators are delivered pre-charged with nitrogen at a pressure of 30 bar or at value of pressure required at time of order.

The pre-charge value is still on the nameplate of the accumulator.

Depending on the size and quantity ordered, the diaphragm accumulators are shipped in boxes or in cartons or on pallets, or wooden boxes on request.

Unless otherwise required, certificates and documentation are provided together with the accumulators.

### Handling

The original packaging is suitable for handling and general storage.

Where necessary, you should use suitable lifting equipment to support the weight of the accumulators.

Protect from impact, however, the packaging and handle it with care.

### Storage

During storage in the warehouse, leave the product in its original packaging, keeping it away from heat sources and naked flames. The storage temperature should be between +10 and +40°C.

After six years of storage, it is essential to proceed with the replacement of all elastomeric parts before the commissioning.

### Marking on the nameplate of the accumulator

With reference to the 2014/68/EU classification, Article 3, Paragraph 3 and / or risk categories I or II according to the amount and maximum working pressure, the accumulator indicates the following

- logo, name and country of the manufacturer
- product code
- Month / year of production
- Serial number

- Maximum PS pressure and PT test pressure in bar
- Min. and max. TS working temperature in Celsius
- Volume V in litres
- Group of fluids allowed (II)
- CE marking (by volume exceeding 1 litre) with the identification number of the notified body
- Pre-charge pressure in bar

### It is strictly forbidden to:

- engrave or permanently stamp the surfaces of the accumulator shell and / or carry out other operations that could affect or change the mechanical properties of the accumulator
- use the accumulator as a structural element: it should not be subjected to stresses or loads
- change the data of the nameplate and / or accumulator without the permission of the manufacturer
- use a (dangerous) fluid of Group 1 with equipment designed and manufactured for fluids of Group 2.

### Installation

Before installation, you must perform a visual check to verify that the accumulator has not suffered any damage during shipping / handling. Verify that the requested type matches with what stamped on the nameplate.

We recommend using the accumulator with a suitable safety valve (see section 8) or a security safety block type BS (see section 9). This device provides user and equipment protection against possible damage caused by pressure surges, and also makes the maintenance of the accumulator easier, so facilitating the interception and the discharge.

Provide for a clearance of 200 mm above the gas pre-charge valve to allow access to and control of the pre-charge equipment (see section 11.2).

The accumulators type AMS may be installed in any position from horizontal to vertical (preferably with the pre-charge valve at the top), and the nameplate must be visible.

Proceed to the assembly so that no abnormal force affects the pipes connected directly or indirectly to the accumulator, so we recommend the use of supporting components and also fastening (please see Chapter 7) to avoid the transmission of vibrations.

Make sure the fluid is compatible with the elastomer of the diaphragm. Check that the max. allowed accumulator pressure is equal to or greater than that of the hydraulic circuit and that the temperature during operation is maintained within the range expected.

Make sure the fluid does not contain contaminants and/or abrasive.

### Pre-charge of nitrogen

Normally, the diaphragm accumulators are delivered pre-charged with pressurized gas. The pre-charge of gas can be controlled and / or adjusted before or after installation of the accumulator in the hydraulic circuit. For the pre-charge, use only industrial dry nitrogen with a purity of min. 99%. It is important to use the nitrogen from a cylinder equipped with a pressure reducing valve (see Chap.11.3). Use the EPE pre-charge and charging set type PCM to check the charging pressure Calculated Against the pressure, and adjust if necessary.

If the pre-charge pressure is lower than required, connect the inflation tube on one side and the other of the equipment. Connect it to the cylinder of nitrogen or to the pressure reducer. Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than that

set (+ 10 ÷ 15%).

Close the cylinder and remove the connecting pipe from the equipment; wait until the gas temperature has stabilized (1 hour) and calibrate the pressure, discharging the excess gas. Make sure that the gas pipe is not subject to losses and, if necessary, use soap and water.

### Hydraulic pressurization

- Check that the pre-charge pressure is adequate for the application
- Ensure that the hydraulic pressure never exceeds the max. (PS) allowed and shown on the accumulator shell.

To avoid this risk, use a safety item (see Chap. 9).

### Maintenance

- Periodically check the pre-charge pressure of the gas: after the commissioning, check after 2-3 weeks of operation and if there were no leaks, repeat the operation after 3 months; if the pressure at the same temperature was stable, repeat the test at annual intervals. For heavy-duty applications, check the pre-charge every 6 months.
- Periodically (annually) carry out a visual inspection of the accumulator in order to detect any early signs of deterioration such as corrosion, deformation, etc.
- Comply with the requirements of the regulations concerning the verification of the functionality of the equipment according to the country of installation of the accumulator.

### Disassembly

If for failure, scheduled check or retest it is necessary to remove the accumulator from the system, prior to removal, isolate the accumulator from the installation and discharge pressure of the liquid.

All diaphragm EPE accumulators of the AMS series may be repaired.

- Fix the accumulator.
- Remove the pre-charge valve (after having discharged completely the nitrogen).

### Repair

It may consist in replacing the pre-charge valve. For reasons of functionality and security, it is recommended to use only original spare parts. Before starting the repair, drain completely the nitrogen contained in the accumulator.

### Refitting

After thorough cleaning, check and replace the pre-charge valve.

### Pre-charge

- Screw the pre-charge PCM equipment on the gas valve.
- Connect the equipment to the cylinder of nitrogen or to the pressure reducer with the inflation tube.
- Slowly enter the nitrogen in the accumulator until reaching a pressure slightly higher than the set value (+ 10 ÷ 15%).
- Close the cylinder and remove the connecting pipe from the equipment.
- Wait until the gas temperature has stabilized (1 hour).
- Calibrate the pressure discharging the excess gas.

### Demolition and recycling of the accumulator

Before accumulator demolition or recycling, you should always discharge completely the pre-charge pressure and remove the gas valve.

If you need, proceed decontaminating in relation to the fluid used prior to demolition.

Reproduction Is Forbidden.

In The Spirit Of Continuous Improvement, Our Products May Be Changed.